


simpliframe®

www.simpliframe.com 1-888-511-7522

Column Enclosure

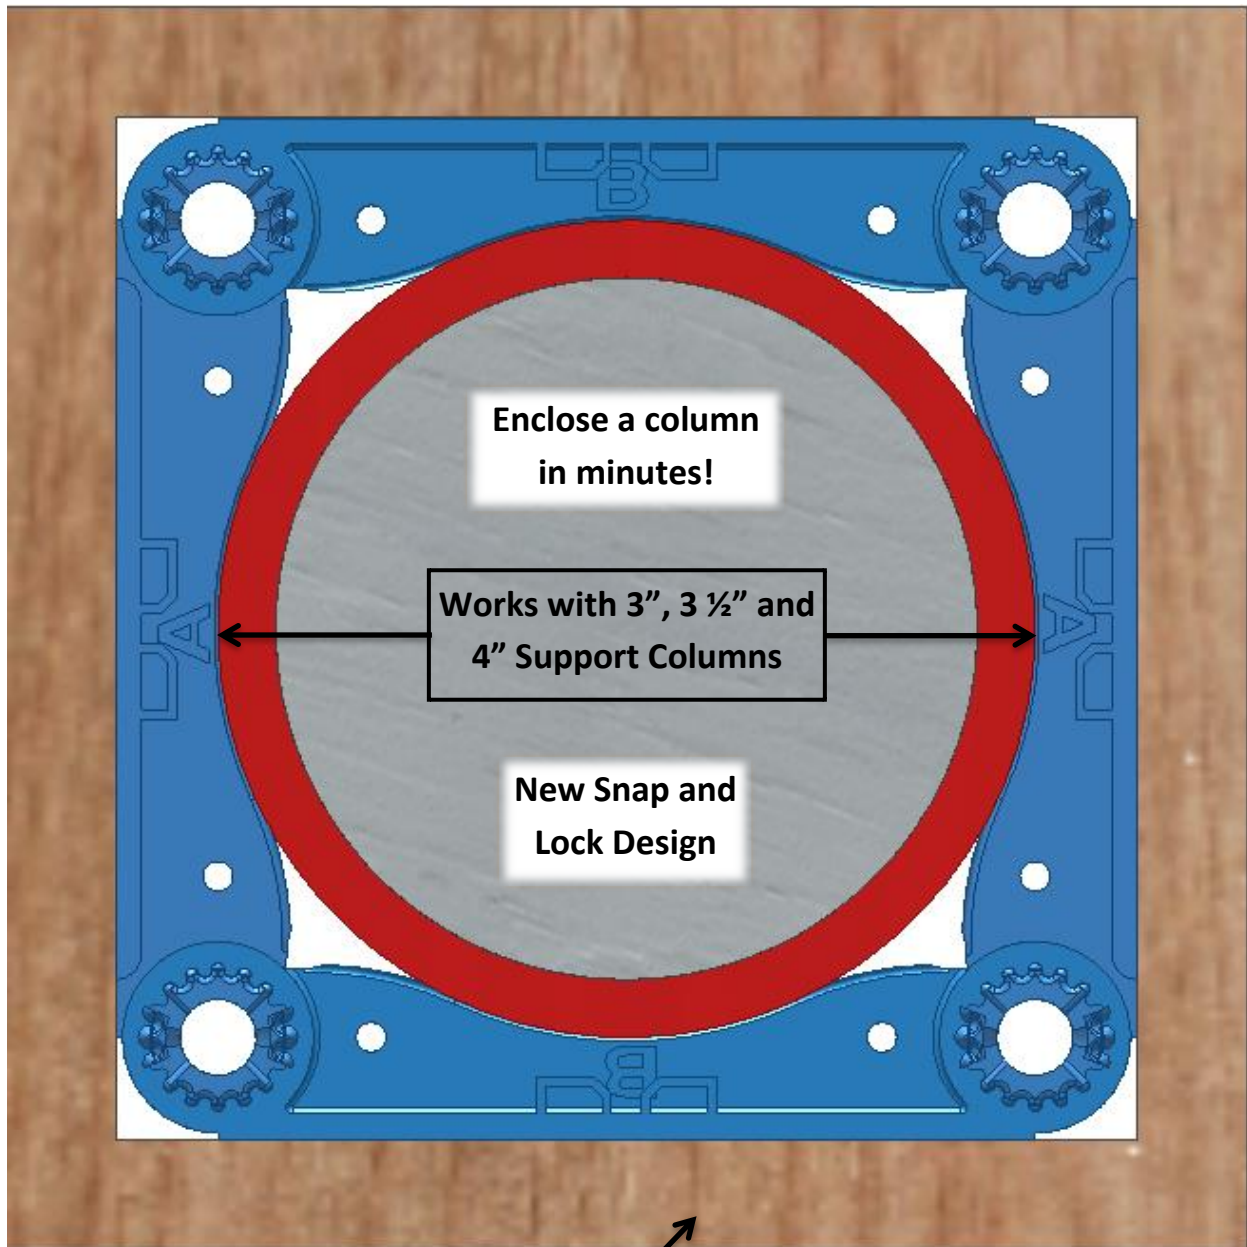


Fasten Drywall to Simpliframes



Separate Parts

Squeeze to Release

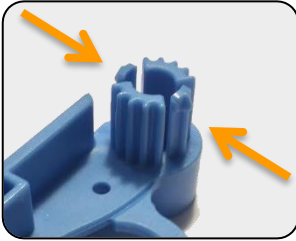

A x 8



B x 8



Directions

1. Snap off PEX pipe connectors then snap off Column supports to size (Select 3", 3 1/2" or 4")
2. Snap parts together around Column
3. Fasten drywall or wood paneling to the Simpliframes and finish with trim as desired

Note: For non-structural assemblies only. Must be covered by appropriate flame spread and smoke index finishes

Installation videos and other projects can be found at www.Simpliframe.com


Patents Pending

1 Snap


Snap Support for Column Size



Remove PEX Support

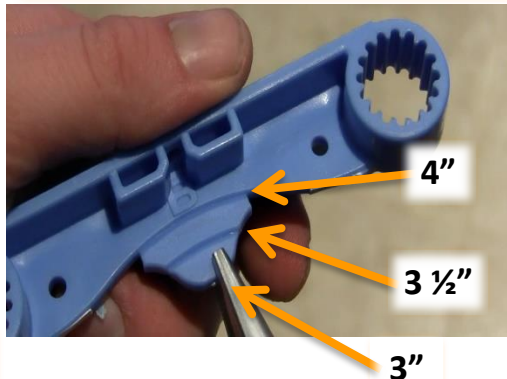

2 Attach

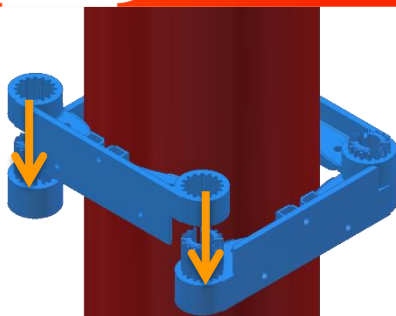

Snap and Lock Together



3 Fasten



We shall not be liable for incidental and consequential damages, directly or indirectly sustained, nor for any loss caused by application of these goods not in accordance with current printed instruction or for other than the intended use. Our Liability is expressly limited to replacement of defective goods. Any claim shall be deemed waived unless made in writing to us within thirty (30) days of the date it was or reasonably should have been discovered.