


simpliframe™


www.simpliframe.com 1-800-511-7522

Column Enclosure

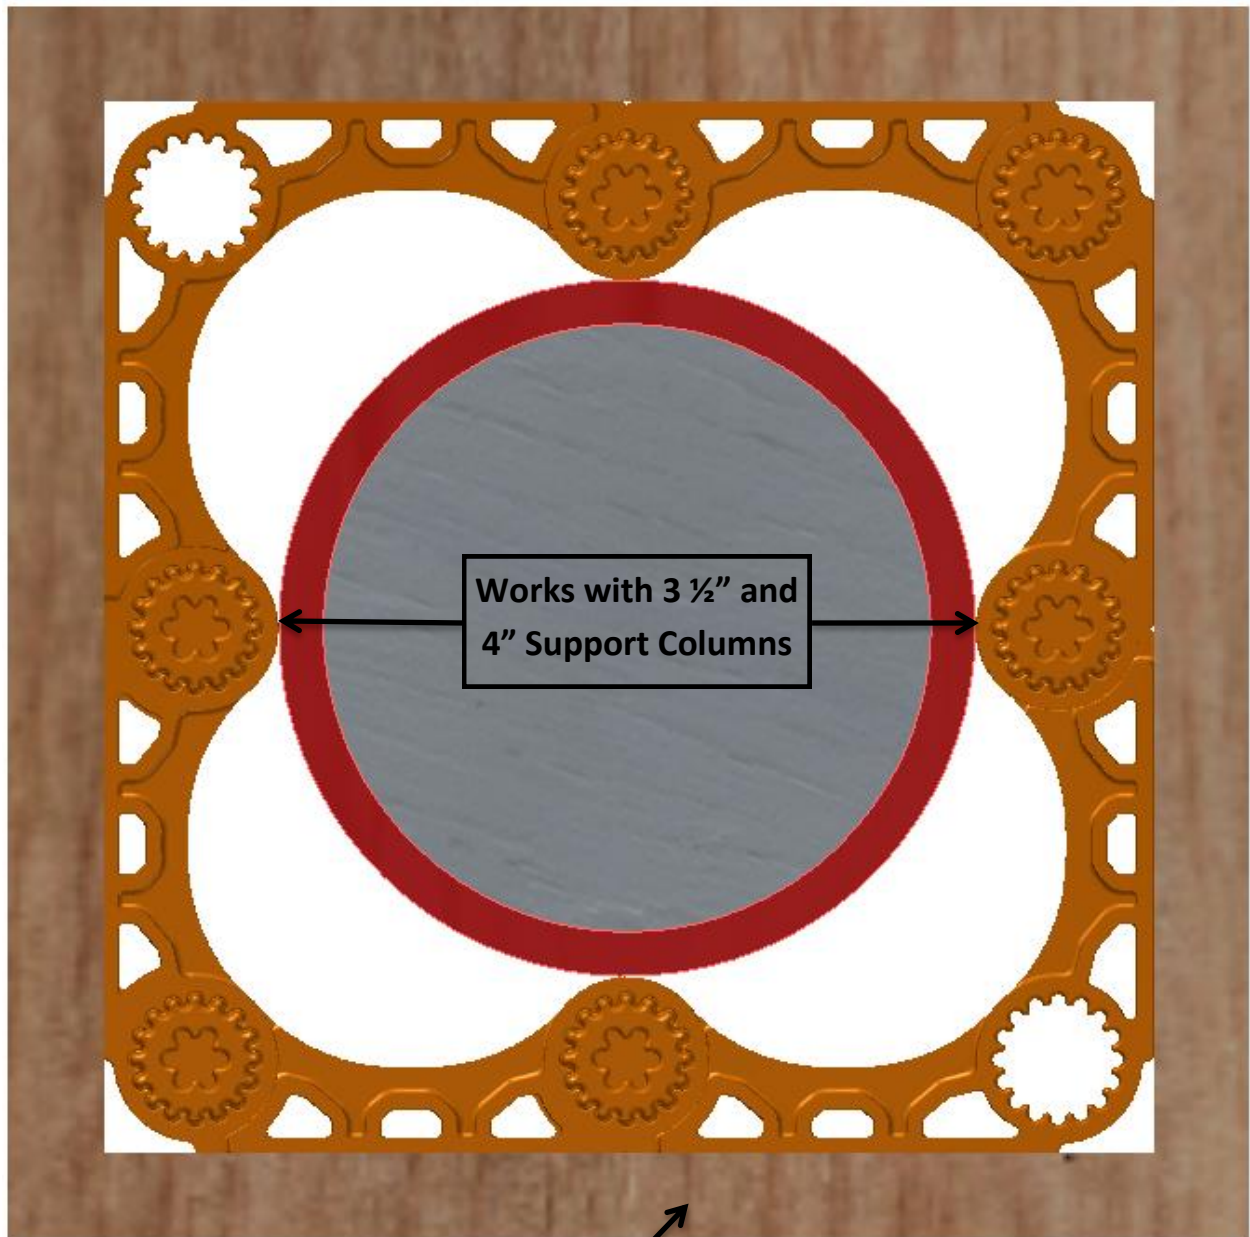

Fasten Panels Directly to Simpliframes

Parts

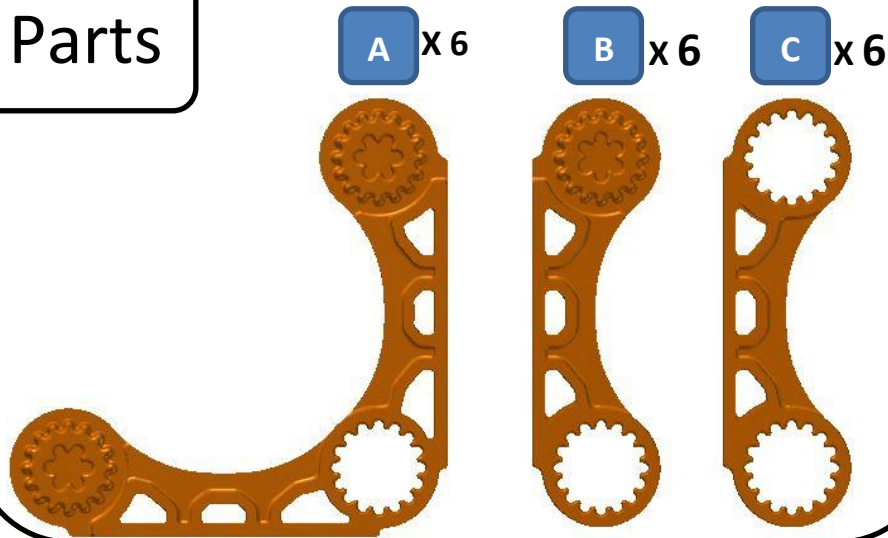


Directions

1. Plug Parts A, B, and C together. Repeat three times. Clamp together for a permanent connection.
2. Fasten these three assemblies to the top, middle, and 1/8" below the bottom of the first panel (for protection against moisture).
3. Lift panel into place and plug the remaining Parts A, B, and C around column to hold in place (shim two sides for 3 1/2" columns).
4. Attach top and bottom simpliframes to ceiling and/or floor (depending on site conditions).
5. Attach remaining panels and finish with trim as desired.


Check out our installation videos at

www.Simpliframe.com

Step 1

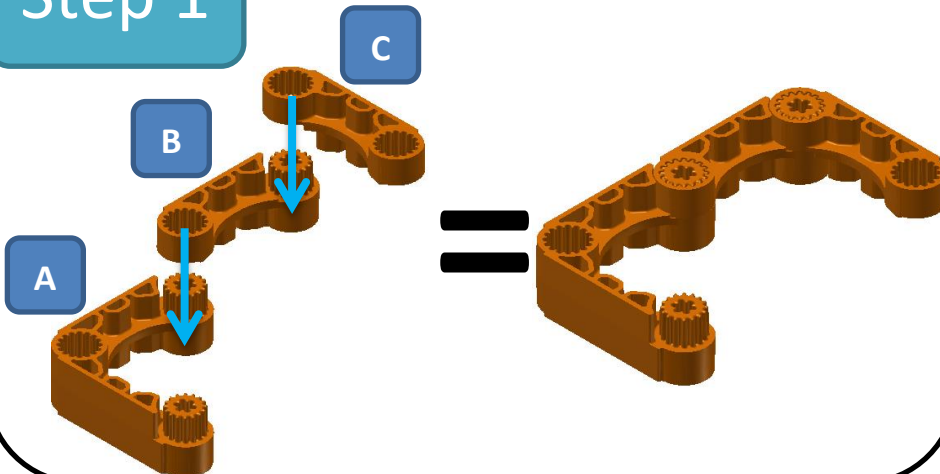

Step 2

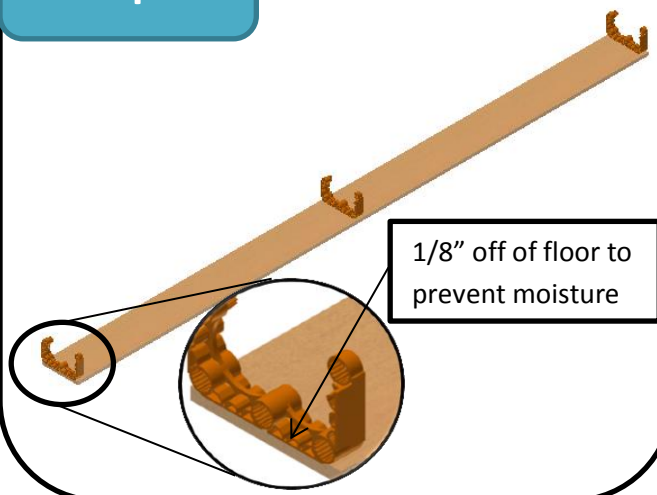

Step 3

